

# 289H LSS Chassis Rear Plate Removal

Located on the back of your 289H LSS chassis are several metal plates—above and below the backplane—that need to be removed prior to installing the 289H's Controller Card, Utility Card and various relay cards. (**Note:** these cards are shipped separately to prevent possible damage during transit.)

Because a Controller Card, Utility Card and at least one relay card are required to place the monitor in operation, the plates for these components have been removed in the factory prior to shipment (see Figure 1). Before installing any additional relay cards in the chassis, or if you want to place the Utility Card in one of the other two auxiliary card slots, you will first need to remove the perforated metal plates as described below.

## Plate Removal:

- 1) Carefully tap on the removable plate inside the perforated slot outline above or below the midpoint (Figure 2) until an edge of the material breaks free. It is recommended that you use a small to medium size standard screwdriver and hammer for this process.

**Caution:** Apply only moderate force when tapping the metal plates. Excessive pounding may loosen the backplane component and/or damage the chassis.

- 2) Then, using a pair of pliers, grip the exposed edge of the plate and twist it back and forth until it breaks free from the attached top and bottom pivot points.
- 3) Remove the plate and discard.
- 4) Complete this process for each slot where a card will be installed.

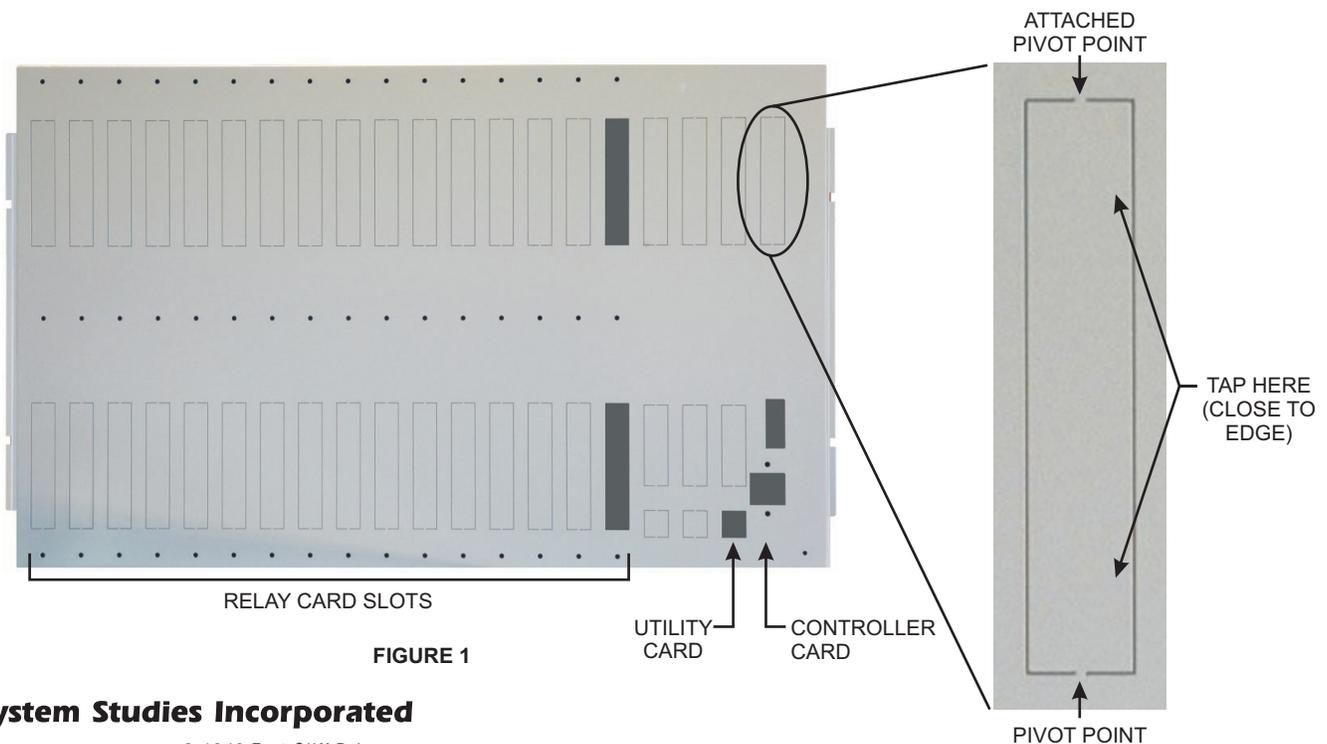


FIGURE 1

FIGURE 2  
REMOVABLE CARD SLOT  
COVER PLATE

## System Studies Incorporated



2-1340 East Cliff Drive  
Santa Cruz, CA 95062  
(831) 475-5777  
(800) 247-8255  
(831) 475-9207 FAX  
e-mail: sales@airtalk.com