


Manual Flow Reading Adjustment

Adjusting Indicated Flow on SCFH Meter (Top LED Display)

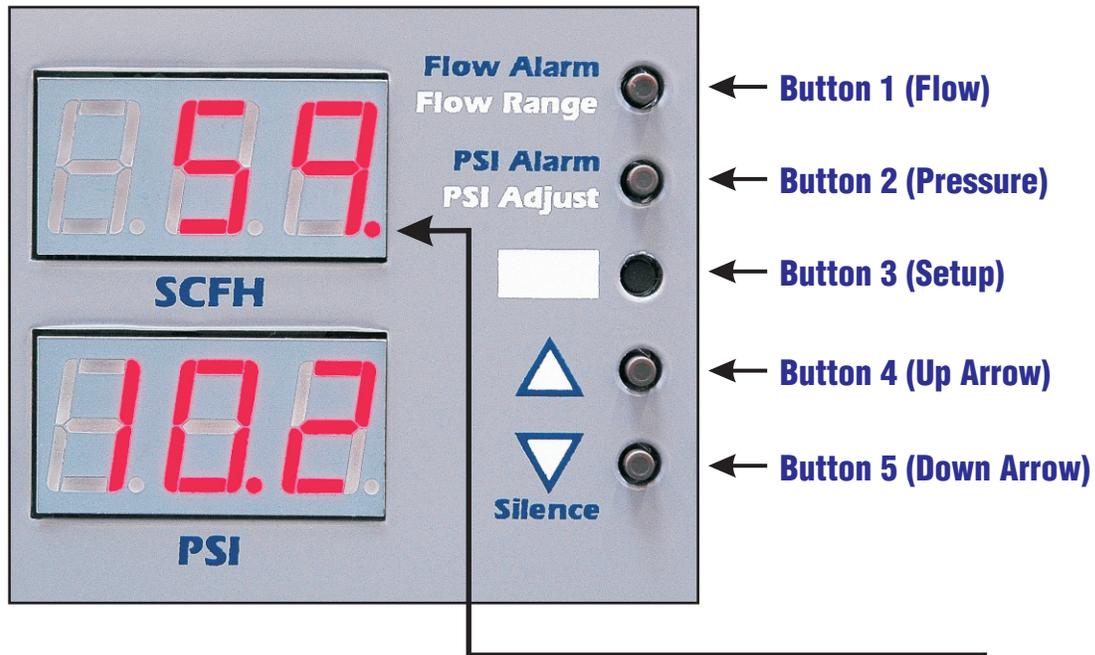

- Step 1** Press and hold down **Button 3**.
- Step 2** At the same time hold **Buttons 1 and 2**.
A small LED light will shine in the bottom right of the display.
- Step 3** Release **Buttons 2 and 3**, while continuing to hold **Button 1**.
- Step 4** Press **Buttons 4 or 5** to increase or decrease indicated flow.
- Step 5** Release all buttons.

System Studies Incorporated



2-1340 East Cliff Drive
Santa Cruz, CA 95062
(831) 475-5777
(800) 247-8255
(831) 475-9207 FAX
www.airtalk.com